


EMCenter™ EM8 Modular Test System

Model 7000-013

Product Manual

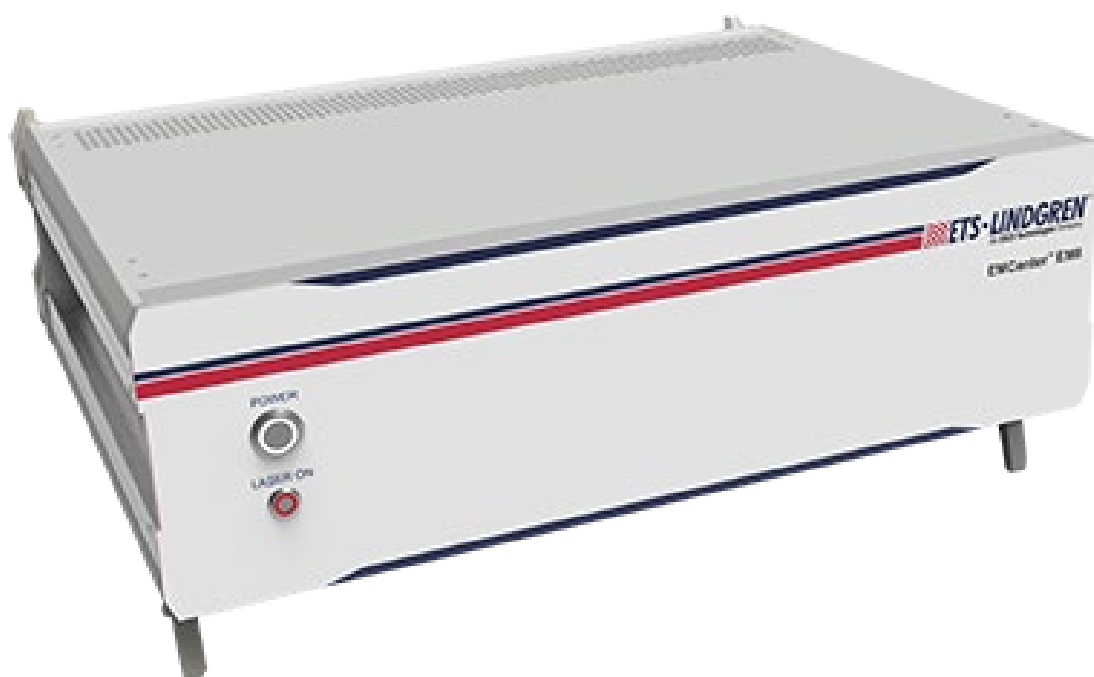

Copyright and Trademark

ETS-Lindgren Inc. reserves the right to make changes to any products herein to improve functioning or design. Although the information in this document has been carefully reviewed and is believed to be reliable, ETS-Lindgren Inc. does not assume any liability arising out of the application or use of any product or circuit described herein; nor does it convey any license under its patent rights nor the rights of others. All trademarks are the property of their respective owners.

© Copyright 2023-2024 by ETS-Lindgren Inc. All Rights Reserved. No part of this document may be copied by any means without written permission from ETS-Lindgren Inc.

Trademarks used in this document: The *ETS-Lindgren* logo is a registered trademark, and *EMCenter*, *EMSwitch*, *EMPower*, *EMControl*, *EMSense*, *EMSense 10/40*, *EMLink*, *EMField*, *TILE!*, and *EMQuest* are trademarks of ETS-Lindgren Inc.

Revision Record

MANUAL, EM8 | Part #1788365, Rev. B

Revision	Description	Date
A	Initial Release	FEB 5, 2024
B	Added Web Interface	FEB 13, 2024


Safety Information



High Voltage: Indicates presence of hazardous voltage. Unsafe practice could result in severe personal injury or death.



Protective Earth Ground (Safety Ground): Indicates protective earth terminal. You should provide uninterruptible safety earth ground from the main power source to the product input wiring terminals, power cord, or supplied power cord set.



Laser Warning: Denotes a laser (class 1M) is part of the operating system of the device.



Waste Electrical and Electronic Equipment (WEEE) Directive: (European Union) At end of useful life, this product should be deposited at an appropriate waste disposal facility for recycling and disposal. Do not dispose of with household waste.

Notes, Cautions, and Warnings



Note: Denotes helpful information intended to provide tips for better use of the product.



CAUTION: Denotes a hazard. Failure to follow instructions could result in minor personal injury and/or property damage. Included text gives proper procedures.



WARNING: Denotes a hazard. Failure to follow instructions could result in SEVERE personal injury and/or property damage. Included text gives proper procedures.


Table of Contents

Copyright and Trademark	ii
Revision Record	ii
Safety Information	iii
Notes, Cautions, and Warnings	iii
Table of Contents	4
Introduction	5
Product Features.....	5
8-Slot Example Application.....	6
Operation	8
Installation	8
Changing Plug-In Cards	8
Interface and Cable Setup	9
Front Panel	9
Back Panel.....	12
Network configuration	13
Remote Control	15
Specifications	17
Physical Specifications.....	17
Environmental Specifications	17
Power Specifications.....	17
Interface and Cable Specifications	17
Appendix A: EC Declaration on Conformity	18

Introduction

ETS-Lindgren's EMCenter™ EM8 is the latest member of the EM family of products capable of significantly higher data collection speeds.

The EMCenter™ EM8 Modular Test System forms the heart of many different EMC and RF test systems. The EMCenter has the ability to store up to eight (8) instrument plug-in cards, which can all be controlled and used simultaneously. The 1 Gigabit LAN interface, providing some of the fastest acquisition in the industry, makes the EMCenter EM8 the ideal hardware platform for applications requiring multiple channels and fast measurements, like automotive mode-stir (reverberation chamber) testing or switching applications.

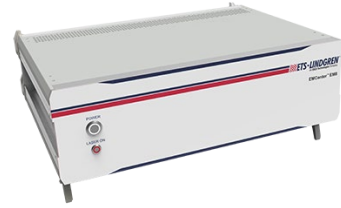

Product Features

- Fast Measurements
 - The EMCenter EM8 is equipped with a 1 Gigabit LAN interface. Each instrument that is installed in the eight slots can be directly controlled at a designated IP address, allowing for fast measurement throughout.
- Laser safety
 - The EMCenter EM8 is equipped with a laser ON/OFF switch to prevent accidental operation and/or starting the laser power supply of the EMSense™ probes.
- Flexible
 - Each of the eight slots can be configured by the user, allowing any combination of plug-in cards. All cards can be commanded and operated using TILE! software.
- Scalable
 - The EMCenter can be scaled using a wide array of available plug-in cards including:
 - EMSense™ LASER powered E-Field Sensors
 - EMField™ Integrated EMC Immunity Test Solution
 - EMPower™ RF power meters for EMC application
 - EMGen™ RF signal generators
 - EMSwitch™ for switching one, two, four or six RF signal

8-Slot Example Application

The international standard ISO11451-5 vehicle test methods for electrical disturbances from narrowband radiated electromagnetic energy – part 5: reverberation chamber describes the measurement of E-fields at eight reference points as part of the immunity test in a reverb chamber.

For this application, the EMCenter EM8 can be configured with eight EMSense laser powered E-field probes, allowing the fast and accurate measurement of the isotropic field strength within the working volume of the chamber. Utilizing multiple switches, the EMCenter EM8 allows for simultaneous communication, increasing the rate of switch state changes and reducing test lag time.



Figure 1: EM8 Front

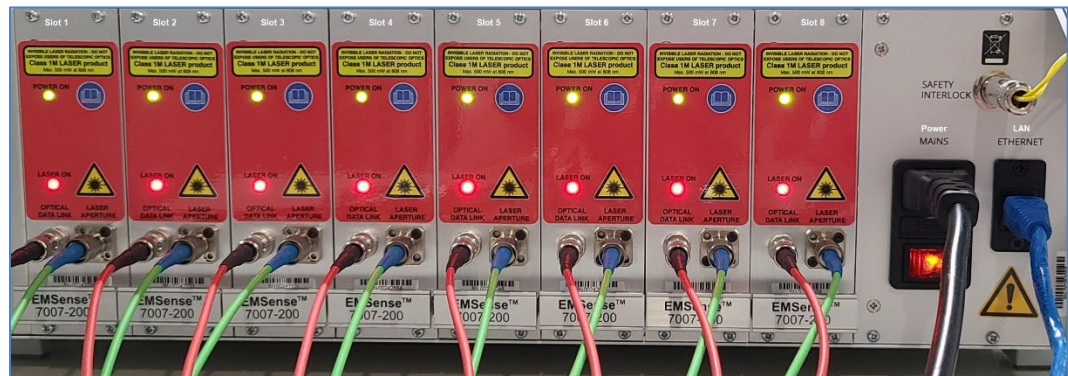


Figure 2: EM8 Back

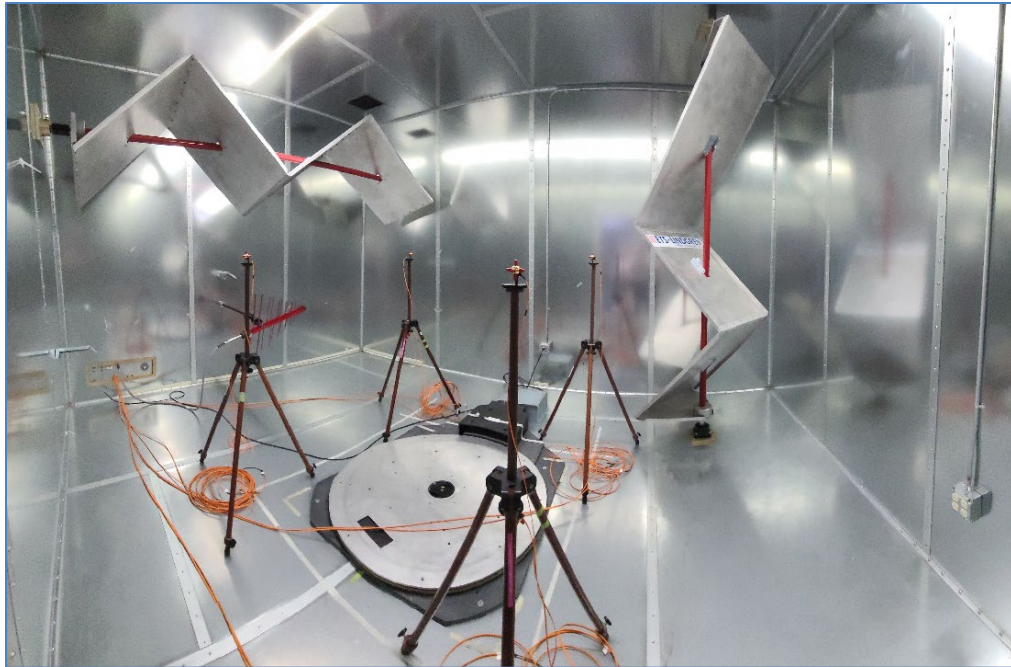


Figure 3: Probes inside the chamber connected to the EM8

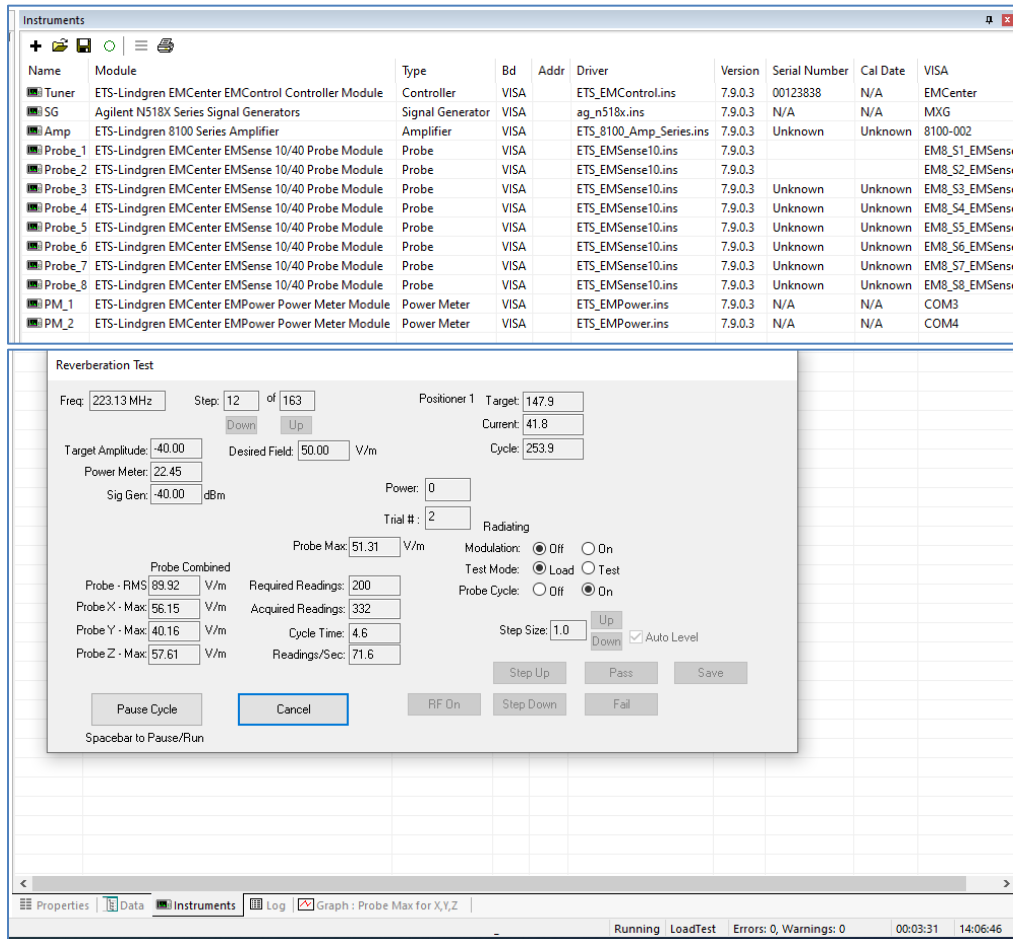


Figure 4: ISO11451-5 vehicle test of EM8 in TILE!

Operation

Installation



CAUTION: Before connecting any components, follow the safety information in the ETS-Lindgren *Product Information Bulletin* included with your shipment.



WARNING: Always unplug the unit before starting maintenance to prevent electrical shock. Maintenance includes removal of the plug-in cards or the top panel.



CAUTION: Leave an empty slot or space 1U in height beneath the EMCenter to allow sufficient cooling through the bottom air inlets of the cabinet.

Changing Plug-In Cards



1. Before installing and inserting a new plug-in card make sure that the EMCenter is turned OFF and disconnect the AC Mains power cord.
2. Determine in which empty slot of the EMCenter you want to install the Plug-in Card. Looking at the back of the EMCenter, the slots are numbered 1 through 8 from left to right.
3. Remove the blank panel from the slot by removing the two screws at the top of the blank panel and the two screws at the bottom. Be careful not to lose the screws.
4. Carefully insert the card into the slot of the EMCenter. Position the plug-in card into the slot and slowly push it, using the lower part of the plug-in card. When it reached the end of the rail, gently push and lock the plug-in card into the backplane socket.

5. Secure the card by tightening the four previous screws using a Pozi type screwdriver head PZ1.
6. Plug the interlock into the connector on the back of the EMCenter.
7. Connect the desired device(s) to the correct plug-in card.
8. Connect the EMCenter to a computer using Ethernet.
9. Re-connect the AC mains power cord and turn ON the EMCenter. It can now be started by tapping the touch screen. The EMCenter will automatically detect the newly installed card.
10. The card installation is complete and the EMCenter is now ready for use. You can control the cards by sending [remote commands](#).

Interface and Cable Setup



CAUTION: Never disconnect the fiber optic cables when one of the lasers is active.



CAUTION: Before placing into operation, follow the information provided in Safety Information on page v.



CAUTION: Prior to operation, verify that the mains voltage is within the operating range of the equipment.

Front Panel



Power Button

How long you press the power button determines which function is used:

ON/OFF (1 sec)

- To power ON the EM8, press and hold the power button for one second until the LED ring around the button lights up in white. After a brief moment, the LED ring will begin flashing, indicating the booting process. Once the LED stops flashing and continues to burn steadily, the EM8 is now ready for use.
- To power OFF the EM8, press and hold the power button one second until an audible beep is heard. After a brief pause, the LED ring will initiate flashing, signaling the shutdown process. Once the LED ceases flashing and turns off, the EM8 is fully powered down.

Reset IP addresses to default (10 secs)

- While the EM8 is in normal operation, hold the power button for about 10 seconds. Release the button within two seconds after the two short audible beeps to initiate the reset of the IP addresses to their default values.
- **NOTE:** It is important not to continuously press the button, as doing so will prevent the IP address reset.

Full Factory reset (30 secs)

- **NOTE:** In the event of lost credentials or the need for reconfiguration of the EM8, a reset to default settings is possible. Factory Reset includes default IP addresses, default software version, default password.
- To perform a factory reset, follow these steps:
 1. Begin by shutting down the EM8.
 2. Turn off the mains power, wait for 20 seconds, and then turn the power back on.
 3. Hold the power button for approximately 30 seconds. Release the button immediately after hearing two short audible beeps.
 4. It's crucial not to keep pressing the button, as this will prevent the factory reset. Releasing the button within two seconds after the two beeps will execute the factory reset.

LASER Button

When the EM8 is equipped with plugin cards, including one or multiple plugin cards containing lasers, the LASER ON button takes on a critical role. Its primary function is to activate the lasers safely simultaneously on all installed plugin cards.

To maintain safety standards, initiating the laser power in the plugin cards follows a twostep process: entering a designated 'laser code' and manually activating the lasers.

- To activate the laser(s) in the EM8, follow these steps:
 1. Press the 'Laser ON' button on the front of the EM8 and hold it.
 2. Five loud 'beep' sounds should be heard.
 3. On the fifth 'beep,' the laser source is activated, and the red LED ring around the button lights up.
 4. Release the 'Laser ON' button.
- This means that:
 5. If the activation process is to be interrupted, release the 'Start' button (before the fifth 'beep'). The laser will not be activated.
 6. If the activation process is interrupted (and released 'Start' button by accident), the laser will not be activated.
 7. The user is warned by an audible warning when the start button is pressed by accident (i.e., without the intention to activate the laser).
- To deactivate the lasers, press the laser-on button once, and all lasers will be powered off.
- **NOTE:** If an error occurs with one of the laser plugin cards, an audible beep will notify you. To resolve this error, simply press the laser on button briefly. This action will clear the error, and the plugin card will stop beeping.

Back Panel



Mains

Plug the power supply cable into the mains inlet of the EM8, power the system by toggling the mains switch located beneath the mains inlet.

Ethernet

There is no display, so everything is controlled exclusively via the Ethernet connection. Therefore, an Ethernet cable must be connected to the rear of the EM8 and your network for proper functionality.

- The box itself a LAN address to change the system settings.
- Each slot can have its own LAN address and therefore be regarded as its own instrument.

Interlock Plug



The EM8 uses a hardware interlock plug (6,3mm 1/4" stereo jack) which can be used as a safety interlock. The hardware interlock plug provides two floating contacts which require connection for certain plugin cards to operate.

By default, the supplied interlock plug is shorted and must be inserted into the interlock input at the back side of the EM8. When a safety interlock is required in your system, please cut the RED wire, and connect the open ends to your interlock system.

Network configuration

The EM8 is factory configured with standard static Ethernet addresses:


Slot number	IP Address	Port number
EM8 system	192.168.1.200	80
Slot 1	192.168.1.201	27531
Slot 2	192.168.1.202	27531
Slot 3	192.168.1.203	27531
Slot 4	192.168.1.204	27531
Slot 5	192.168.1.205	27531
Slot 6	192.168.1.206	27531
Slot 7	192.168.1.207	27531
Slot 8	192.168.1.208	27531
Subnet address	255.255.255.0	-

Access Web Interface

To configure the EM8 for your network configuration please follow the next steps:

1. Connect to EM8:
 - a. Connect your computer to the EM8 using an Ethernet cable.
 - b. Ensure that EM8 is powered on.
2. Find Your Computer's IP Address:
 - a. Check your computer's IP address to ensure it's in the same subnet. Open a command prompt (Windows) or terminal (macOS/Linux) and type "*ipconfig*" (Windows) or "*ifconfig*" (macOS/Linux).
 - b. Ensure that the IPv4 address is in the range of **192.168.1.x**. If not, set an "*Error! Reference source not found*" in the same subnet.

3. Access EM8 Web Interface:
 - a. Open a web browser (e.g., Chrome, Firefox, or Safari).
 - b. In the address bar, type “*http://192.168.1.200 (port 80)*” and press Enter.
4. Login to EM8:
 - a. Enter the username and password when prompted. The default credentials for the EM8 are:
 - i. **Username:** admin
 - ii. **Password:** EMC3447!
 - b. **NOTE:** In the event of lost credentials or the need for reconfiguration of the EM8, a reset to default settings is possible. [Factory Reset](#) includes default IP addresses, default software version, default password.
5. Once logged in on the configuration page, the following settings can be updated as needed:

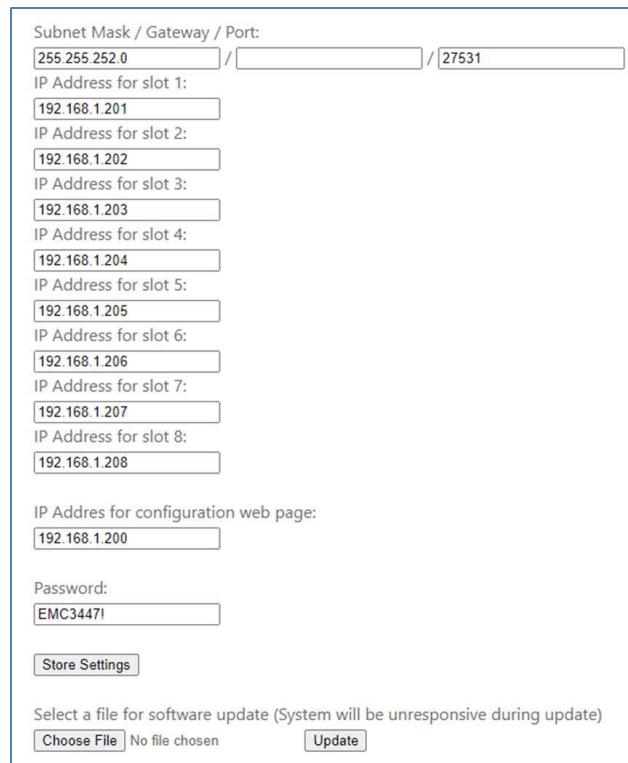

The screenshot displays the configuration interface for the EM8 system. It includes fields for Subnet Mask (255.255.252.0), Gateway, and Port (27531). Below these are eight slots for IP addresses, each with a corresponding input field. The IP addresses for slots 1 through 8 are 192.168.1.201 through 192.168.1.208. There is also a field for the IP Address for the configuration web page (192.168.1.200) and a Password field (EMC3447!). A 'Store Settings' button is located below the password field. At the bottom, there is a section for software updates, including a 'Choose File' button, a 'No file chosen' status, and an 'Update' button. A note states: 'Select a file for software update (System will be unresponsive during update)'.

Basic configuration page of the modular test system

- a. Update all IPv4 addresses, both in the slots and on the configuration page, to be within the range of your network.
- b. Modify the subnet-mask as needed (default 255.255.255.0).

- c. Update the Port setting as needed (default port 27531). (Verify that the selected port address is not blocked by the router).
 - d. Modify the default password for the configuration page as needed.
- 6. Save changes:
 - a. Once the desired changes have been made, please press the "Store" button. This action will automatically initiate a reboot of the EM8 to apply the modifications.
- 7. Check changes:
 - a. After rebooting the EM8, reload the configuration page by refreshing it.
 - b. If the IP address of the configuration page has changed, navigate to the newly assigned IP address to access.
 - c. If the EM8 is configured for your Local Area Network (LAN), disconnect it from your computer and connect it to your LAN. You should now be able to access the EM8 configuration page at the redefined address through your local area network. Do not forget to change your computer's IP address.
 - d. Verify the correctness of all settings to ensure a seamless connection before proceeding with communication with your plugin cards. Ensuring the accuracy of settings guarantees smooth integration and effective communication with your chosen software applications.

Remote Control




To use the EMCenter remote commands, read the [manual document 399342](#) **EMCenter** for examples and a full command list.

Example of connecting via other software: PuTTY

The provided configuration enables a raw connection without specifying a particular protocol, facilitating direct interaction with the plugin card in an unprocessed manner. This setup allows for the transmission of commands and reception of responses from the plugin card.

Specifically, each plug-in card supports the command `"*IDN?"` for retrieving its identification information. When the configuration and connection are correct, issuing this command to the plug-in card will prompt it to return the identifier string (ID) associated with the plug-in card.

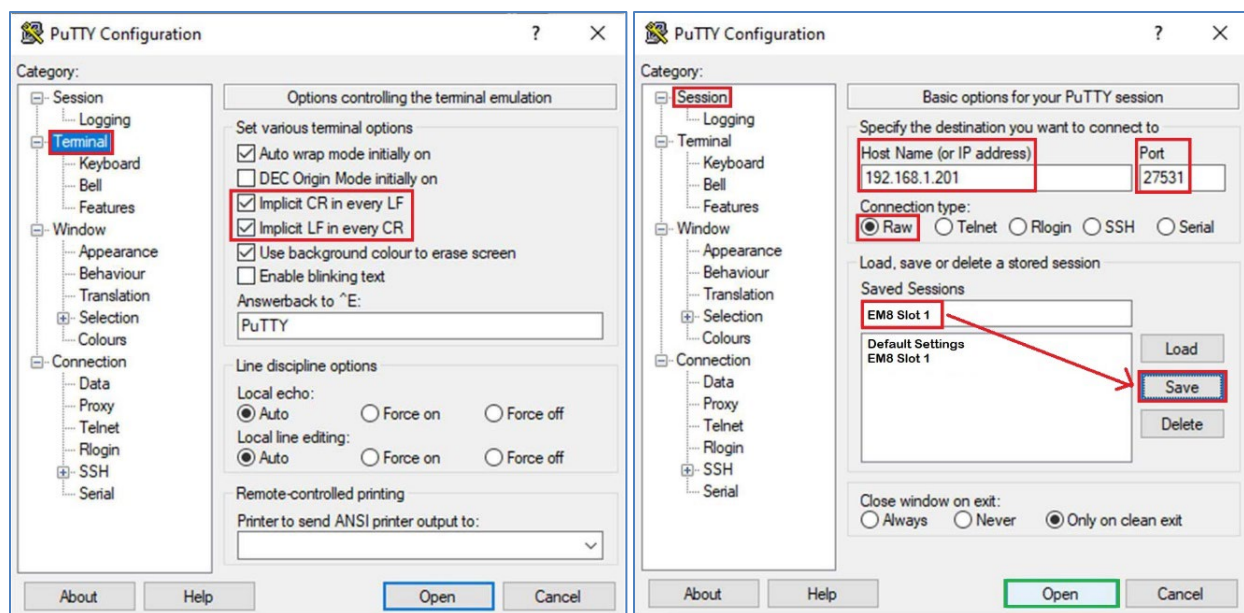

If you want to establish a raw connection without specifying a particular protocol in PuTTY, you can follow these steps:

1. Open PuTTY.
2. On the left menu select **"Terminal"**:
 - a. Enable **"Implicit CR in every LF"** and **"Implicit LF in every CR"** to automatically send a Carriage Return after every Line Feed and vice versa.
3. On the left menu select **"Session"**:
 - a. Enter the IP address "192.168.1.201" in the "Host Name (or IP address)" field.
 - b. In the "Port" field, enter "27531" as the port number for the default configuration.
 - c. Under "Connection type," choose the "Raw" option.
 - d. Under "Saved Sessions," enter a name for your session in the "Saved Sessions" field (e.g., "EM8 Slot 1").
 - e. Click the "Save" button to save your configuration.
 - f. Click the "Open" button to start the raw connection.

Specifications

Physical Specifications

Height:	132 mm (5.2 in)(3U)
Width:	19 in rack mountable
Depth:	312 mm (12.3 in) excluding rear panel
Weight:	~15.4 lbs. (7kg) empty

Environmental Specifications

Temperature Range:	0°C to 40°C (32°F to 104°F)
Relative Humidity:	5% to 95% (non-condensing)

Power Specifications

Supply Voltage:	115/230 VAC
Power Consumption:	• Standby: < 3 W • Empty: 33 W • Max load: 225 W

Interface and Cable Specifications

Backplane	• Ethernet • 6.35mm (1/4") jack • Fused and switched IEC 320 C13 socket • 8 blanking plates (replace with plug in cards)
Cables:	IEC power cord
Interfaces:	LAN
Interlock:	6.35 mm jack plug connection to safety disables interlock & interlocked laser outputs when triggered
Mounting:	Desktop or 19-in rack mountable
Slots:	8 modular card slots

Appendix A: EC Declaration on Conformity

ETS-Lindgren Inc. declares these products to be in conformity with the following standards and provisions:

Product Models: **EMCenter Modular RF Platform**

Directives: EMC Directive 2014/30/EU
Low Voltage Directive 2014/35/EU
RoHS Directive: 2015/863/EU

Emission: EN 61326-1:2013, Class A1
Electrical equipment for measurement, control and laboratory use.

Immunity: EN 61326-1:2013, Industrial level, performance criteria A
Electrical equipment for measurement, control and laboratory use.

Safety: EN 61010-1:2010, Safety requirements for electrical equipment
for measurement, control, and laboratory use.

RoHs: EN 63000:2018, Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances.

Technical Construction Files are available upon request.